



CÓDIGO	MODELO	IMPRESORA
□ APPLE		
02021	M330G/A	Color Stylewriter 2400-2500 (BCI21N) Negro
02022	M3329G/A	Color Stylewriter 2400-2500 (BCI21C) Negro
03002	M8041G/C	Stylewriter II-1200-1500 (BC02) Negro
□ BROTHER		
0212658	LC-600BK	MFC/DCP-580/ 590/ 890 Negro
0212655	LC-600C	MFC/DCP-580/ 590/ 890 Cyan
0212656	LC-600M	MFC/DCP-580/ 590/ 890 Magenta
0212657	LC-600Y	MFC/DCP-580/ 590/ 890 Yellow
024468	LC-700BK	MFC/DCP-4020C/ 4820C Negro
025279	LC-700C	MFC/DCP-4020C/ 4820C Cyan
025280	LC-700M	MFC/DCP-4020C/ 4820C Magenta
025281	LC-700Y	MFC/DCP-4020C/ 4820C Yellow
027298	LC-800BK	MFC/DCP-3X20C/ 3X20CN Fax 1820C Negro
027299	LC-800C	MFC/DCP-3X20C/ 3X20CN Fax 1820C Cyan
027300	LC-800M	MFC/DCP-3X20C/ 3X20CN Fax 1820C Magenta
027301	LC-800Y	MFC/DCP-3X20C/ 3X20CN Fax 1820C Yellow
0215709	LC-900BK	MFC210C/ 3240C/ 5X40CN/ DCP-110C/ 310CN Negro
0215749	LC-900C	MFC210C/ 3240C/ 5X40CN/ DCP-110C/ 310CN Cyan
0215750	LC-900M	MFC210C/ 3240C/ 5X40CN/ DCP-110C/ 310CN Magenta
0215751	LC-900Y	MFC210C/ 3240C/ 5X40CN/ DCP-110C/ 310CN Yellow
□ CANON		
03002	BC-01	BJ10E,BJEX,BJ20,APPLE STYLWRITER, BROTHER HJ 100 Negro
03002	BC-02	BJ 200/230 Negro
02201	BJI-201BHC	BJC 600 Negro
02202	BJI-201C	BJC 600 Cyan
02203	BJI-201M	BJC 600 Magenta
02204	BJI-201Y	BJC 600 Amarillo
03020	BC20N	BJC 4000 Series Cabezal Negro
02021	BCI21N	S100 BJC 4000 Series Carga negra
02022	BCI21C	S100 BJC 4000 Series Carga color
02300	BCI24BTP	S200/S300 Carga negra
02301	BCI24CTP	S200/S300 Carga color
02103	BCI-3EB	S450 BJC 3000 / 6000 Carga negro
02104	BCI-3EC	S450 BJC 3000 / 6000 Carga Cyan
02105	BCI-3EM	S450 BJC 3000 / 6000 Carga Magenta
02106	BCI-3EY	S450 BJC 3000/ 6000 Carga Amarillo
021031	BCI-3ePBK	S450 BJC 3000 / 6000 Fotografico negro
021041	BCI-3ePC	S450 BJC 3000 / 6000 Fotografico Cyan
021051	BCI-3ePM	S450 BJC 3000 / 6000 Fotografico Magenta
02010	BCI-10	BJ-30 BJC-70 Negro
02011	BCI-11N	BJC 70 Negro
02012	BCI-11C	BJC 70 Cartucho 3 colores
02061	BCI-61	BJC 700 / 7000 Recarga color
02062	BCI-62	BJC 700 / 7000 Recarga cartucho fotogràfico
02150	BCI-5/ BCI-6BK	BJC 8200/ S800 Photo Carga negro cartucho BC-50
02151	BCI-5/ BCI-6C	BJC 8200/ S800 Photo Carga azul cartucho BC-50
02152	BCI-5/ BCI-6M	BJC 8200/ S800 Photo Carga rosa cartucho BC-50
02153	BCI-5/ BCI-6Y	BJC 8200/ S800 Photo Carga amarillo cartucho BC-50
02154	BCI-5/ BCI-6PC	BJC 8200/ S800 Photo Carga foto cartucho BC-50 Cyan
02155	BCI-5/ BCI-6PM	BJC 8200/ S800 Photo Carga foto cartucho BC-50 Magenta

02156	BCI-8BK	BJC 8500 Negro
02157	BCI-8C	BJC 8500 Cyan
02158	BCI-8M	BJC 8500 Magenta
02159	BCI-8Y	BJC 8500 Amarillo
02180	BCI-8PB	BJC 8500 negro photo
02181	BCI-8PC	BJC 8500 cyan photo
02182	BCI-8PM	BJC 8500 magenta photo
02084	BCI-8BWF	BJC 8500
03BX20	BX20	CANON MULTIPASS MP-C20/30/C50/C80/B210C Cartucho
03120	BX2	B-320/340/360 Inkjet
03130	BX3	B-100/MP10 Inkjet
□ DELL		
0316	10N0016	Printer 720/ A920 Negro
0326	10N0026	Printer 720/ A920 Color
□ EPSON		
02025	SO 20025	Stylus Color 400 / 800 / 800 + / 1000 Negro
03002	SO 20031	Stylus 300 (BC02) Negro
02034	SO 20034	Stylus Color / Pro / Pro XL / Pro XL + Negro
02036	SO 20036	Stylus Color / Pro / Pro XL / Pro XL + / 1500 Color
02047	SO 20047	Stylus Color 200 / 820 // II / IIs Negro
02049	SO 20049	Stylus Color 820 / 1500 // II / IIs Color
02162	SO 20062	Stylus Color 1500 Negro
02066	SO 20066	Stylus Color Pro XL +
02097	SO 20097	Stylus Color 200 / 500 Color
02050	T050140	Epson (SO20093/SO20187/T013)
02051	T051140	Epson (SO20108/SO20189)
02052	T052040	Epson (SO20089/SO0191/T014)
02053	T053040	Stylus Color Photo 700/EX/750 (C13S020110/C13S020193)
02138	SO 20138	Stylus Color 300 color
02003	T003011	Stylus COLOR 900 / 980 Negro
02005	T005011	Stylus COLOR 900 / 980 Color
02007	T007401	Stylus PHOTO 870/875DC/1270 Negro
02008	T008401	Stylus PHOTO 870/875DC Color
02009	T009401	Stylus PHOTO 1270 Color
02001	T001011	Stylus PHOTO 1200 Color
02017	T017401	Epson Stylus Color 680 / 685 / 777 Negro
02018	T018401	Epson Stylus Color 680 / 685 / 777 Color
02019	T019401	Epson Stylus Color 880 Negro
02020	T020401	Epson Stylus Color 880 Color
02470	T407011	Epson Stylus Pro 9000 Negro
02480	T408011	Epson Stylus Pro 9000 Amarillo
02490	T409011	Epson Stylus Pro 9000 Magenta
02410	T410011	Epson Stylus Pro 9000 Cyan
02411	T411011	Epson Stylus Pro 9000 Magenta Claro
02412	T412011	Epson Stylus Pro 9000 Cyan Claro
0236	T036140	Epson Stylus C42 Negro
0237	T037040	Epson Stylus C42 Color
02118	S020118	Epson Stylus Color 3000/Stylus PRO 5000 Tinta Negra
020122	S020122	Epson Stylus Color 3000/Stylus PRO 5000 Tinta Amarilla
02126	S020126	Stylus Color 3000 Tinta Magenta
02130	S020130	Stylus Color 3000 Tinta Cyan
02147	S020147	Stylus PRO 5000 Cyan
02143	S020143	Stylus PRO 5000 Magenta
02264	T026401LB	Epson Stylus Photo 810 Negro
02274	T027401	Epson Stylus Photo 810 Color
02284	T028401LB	Epson Stylus C60 Negro
02294	T029401	Epson Stylus C60 Color
0240	T040140	Epson Stylus C62 Negro
0241	T041140	Epson Stylus C62 Color
02331	T033140	Epson Stylus Photo 950 Negro
02332	T033240	Epson Stylus Photo 950 Cian
02333	T033340	Epson Stylus Photo 950 Magenta
02334	T033440	Epson Stylus Photo 950 Amarillo
02335	T033540	Epson Stylus Photo 950 Cian Claro
02336	T033640	Epson Stylus Photo 950 Magenta Claro
02015	T015401	Epson Stylus Photo 2000P Negro
02016	T016401	Epson Stylus Photo 2000P Color
02321	T032140	Epson Stylus C70/C80 Negro

02322	T032240	Epson Stylus C70/C80 Cian
02323	T032340	Epson Stylus C70/C80 Magenta
02324	T032440	Epson Stylus C70/C80 Amarillo
02422	T042240	Epson Stylus C82/CX5200 Cian
02423	T042340	Epson Stylus C82/CX5200 Magenta
02424	T042440	Epson Stylus C82/CX5200 Amarillo
02431	T043140LB	Epson Stylus C84/86 CX6400/6600 Negro Durabrite 29ml.
025226	T044140LB	Epson Stylus C64/66/84/86 CX6400/6600 Negro Durabrite 13ml.
02442	T044240LB	Epson Stylus C64/66/84/86 CX6400/6600 Cian Durabrite 13ml.(alta capacidad)
02443	T044340LB	Epson Stylus C64/66/84/86 CX6400/6600 Magenta Durabrite 13ml.(alta capacidad)
02444	T044440LB	Epson Stylus C64/66/84/86 CX6400/6600 Amarillo Durabrite 13ml.(alta capacidad)
02481	T048140LB	Epson Stylus Photo R200/R300/R500/R600 Negro
02482	T048240LB	Epson Stylus Photo R200/R300/R500/R600 Cian
02483	T048340LB	Epson Stylus Photo R200/R300/R500/R600 Magenta
02484	T048440LB	Epson Stylus Photo R200/R300/R500/R600 Amarillo
02485	T048540LB	Epson Stylus Photo R200/R300/R500/R600 Cian claro
02486	T048640LB	Epson Stylus Photo R200/R300/R500/R600 Magenta Claro
02551	T055140LB	Epson Stylus Photo RX420/425 Negro
02552	T055240LB	Epson Stylus Photo RX420/425 Cian
02553	T055340LB	Epson Stylus Photo RX420/425 Magenta
02554	T055440LB	Epson Stylus Photo RX420/425 Amarillo
02591	T059140	Epson Stylus Photo R2400 Negro
02592	T059240	Epson Stylus Photo R2400 Cian
02593	T059340	Epson Stylus Photo R2400 Magenta
02594	T059440	Epson Stylus Photo R2400 Amarillo
02595	T059540	Epson Stylus Photo R2400 Cian claro
02596	T059640	Epson Stylus Photo R2400 Magenta claro
02597	T059740	Epson Stylus Photo R2400 Gris
02598	T059840	Epson Stylus Photo R2400 Negro mate
02599	T059940	Epson Stylus Photo R2400 Gris claro
02611	T061140	Epson Stylus D88/ DX3800/ 4200/ 4800 Negro
02612	T061240	Epson Stylus D88/ DX3800/ 4200/ 4800 Cian
02613	T061340	Epson Stylus D88/ DX3800/ 4200/ 4800 Magenta
02614	T061440	Epson Stylus D88/ DX3800/ 4200/ 4800 Amarillo
02341	T034140	Epson Stylus Photo 2100 negro photo
02342	T034240	Epson Stylus Photo 2100 cian
02343	T034340	Epson Stylus Photo 2100 magenta
02344	T034440	Epson Stylus Photo 2100 amarillo
02345	T034540	Epson Stylus Photo 2100 cian claro
02346	T034640	Epson Stylus Photo 2100 magenta claro
02347	T034740	Epson Stylus Photo 2100 negro claro
02348	T034840	Epson Stylus Photo 2100 negro mate
0266	T066140	Epson Stylus C48 negro
0267	T067040	Epson Stylus C48 color
02540	T054040	Epson Stylus Pro Photo R800/8100 optimizador de brillo
02541	T054140	Epson Stylus Photo R800/8100/1800 negro photo
02542	T054240	Epson Stylus Photo R800/8100/1800 cian
02543	T054340	Epson Stylus Photo R800/8100/1800 magenta
02544	T054440	Epson Stylus Photo R800/8100/1800 amarillo
02547	T054740	Epson Stylus Photo R800/8100/1800 rojo
02548	T054840	Epson Stylus Photo R800/8100/1800 negro mate
02549	T054940	Epson Stylus Photo R800/8100/1800 azul

HP

03023	C 1823A	Deskjet 710C/720 C/722 C/880 C/890 C/895 cxi/1170 C/1175 C Color 32ml
03078	C 6578AE	DJ 930C/940C/950C/960C/970cxi/DJ 1220C/Photosmart P1000/P1100 Cartucho tri-color N°78 Doble capacidad Color
03026	51626A	Deskjet / Deskjet Plus // Deskwriter / Deskwriter C Deskjet 400 / 400 C Deskjet 500 / 500 C / 510 / 520 / 540 / 550 C / 560 Deskwriter 510 / 520 / 540 / 550 C / 560 C Designjet / 200 / 200 D / 200 E / 220 / 500 E / 600 / 600 D Officejet 350 - LX Fax 200 / 3xx / 7xx / 9xx
03029	51629A	Deskjet 600 / 660 C / 670 C / 690 C / 693 C / 694 C Deskwriter 600 / 660 C Officejet 500 / 590 Negro
03049	51649AE	Deskjet 350c/cbi/600/610c/640c/660c/670c/690 Deskwriter 600/660c/670c Officejet 500/590/635/700 series cartucho tricolor 22,8 ml. n° 49
03045	51645A	Deskjet 710c / 720 C/722c/1100c/1120c/1220c/1600 C/C-PS Deskjet 850/855 C/880C/890 C/ 820 Cxi/870 Cxi/895cxi/9xxc Officejet Pro 1150 C Designjet 700 / 750 C / 750 C + / 755 CM
03014	C6614DE	DJ 610C / 615C Negro doble capacidad que el original
03025A	C6625AE	DJ 816C / 825C / 840C / 843C / 845C Color 20ml
03015	C6615DE	DJ 810C / 816C / 840C / 843C Negro doble capacidad
03027	C8727A	Deskjet 3320/ 3420/ 5850 serie cartucho Negro N°27
03028	C8728A	Deskjet 3320/ 3420/ 5850 serie cartucho Tricolor N°28 doble capacidad
03056	C6656A	Deskjet 450/5550/5850 Photosmart serie 7000/PSC2000/1210/1350/2100/2110 Officejet 4110/6100/6110 Job-Jet M400/P210 cartucho Negro N°56
03057	C6657A	Deskjet 450/5550/5850 Photosmart serie 7000/PSC2000/1210/1350/2100/2110 Officejet 4110/6100/6110 Job-Jet M400/P210

03339	C8767EE	cartucho Tricolor N°57 Deskjet 6540/6620/5740/5745/6840/6540d/9800, photosmart 2575/2710/8050/8150/8450, officejet 7310/7410 PSC 2350 N° 339 Negro
03344	C9363EE	Deskjet 6540/6620/5740/5745/6840/6540d/9800, photosmart 470/2575/325/370/375/2710/8050, officejet 7310/7410/6210 PSC 2350/2355 Color n° 344
03051	C9351AE	Deskjet 3920/ 3940 PSC 1410 Negro N° 21 15ml (tinta util el doble que el original)
03052	C9352AE	Deskjet 3920/ 3940/ PSC 1410 Officejet 5600 serie/ 5610/ 5615 Tricolor N° 22 15ml (tinta util el doble que el original)
□ IBM - LEXMARK		
03620	13400HC	SF3000/SF3000T/SF3100/SF3100P/SF3100T SF3200/SF4000/SF4020 (600 Pág.)
03970	12A1970	Z11/Z51/Z31/Z42/Z43/Z45/Z52/Z53/Z54 Optra Color 40/45 Multifunción X73/X80/X83/X85/X125/X4250/F4270 Negro n° 70
03980	12A1980	Z31/Z11-Optra Color 40/45 Color n° 80
030120	15M0120	Z42/Z43/Z51/Z52/Z53/Z45/Z54 Multifunción X73/X80/X83/X85/X125/X4250/F4270 3 Colores n° 120
0350	17G0050	Z12/Z22/Z32/703/705 P706/707/3150 Negro n° 50
0360	17G0060	Z12/Z22/Z32 Color n° 60
0316	10N0016	Z13/Z23/Z33 Negro n° 16
0326	10N0026	Z13/Z23/Z33 Color n° 26
□ OLIVETTI		
0220	FPJ20	JP150/ 150W/ 190 /350/ 450/ OFX180/ 500/ 520/ 525/ 540/ 550/ 560/ 570/ 575/ 580/ 1000/ 1100/ 1200/ 2100/ 2200/ 3100/ 3200/ LAB250/ 210/ 260
□ PANASONIC		
02021	BCI 21 BK	KXF 1600 COLOR FAX/UX 342 Negro
03026	HP 26A	UF 300 / 305 / 310 / 311 / 312 Negro
03026	HP 26A	UF 315 / 321 / 322 / 335 / 350 /360 / PD 4200 Negro
03026	HP 26A	PROLINE PX 350 / 360 Negro
□ XEROX		
03026	HP 26A	XF.52 / 55 / 56 Negro
02660	8R7660	DWC450/XJ4C Cartucho Negro
02661	8R7661	DWC450/XJ4C Cartucho Cyan
02662	8R7662	DWC450/XJ4C Cartucho Magenta
02663	8R7663	DWC450/XJ4C Cartucho Amarillo
02728	8R12728	Y100- Cartucho Negro
02972	8R7972	Y101- Cartucho Cyan
02973	8R7973	Y102- Cartucho Magenta
02974	8R7974	Y103- Cartucho Amarillo
□ SAMSUNG		
0340	INK-M40	SF-330/ SF-331
□ KITS DE RECARGA		
039701	LEXMARK 12A1970	
03LC1980	LEXMARK 12A1980, 12A1985, COLOR (4 recargas)	
03LC1520	LEXMARK 15M0120, 15M0125, 15M2619, COLOR (4 recargas)	
03LC1760	LEXMARK 17G0060, 17G0065, COLOR (4 recargas)	
03LC1026	LEXMARK 10N0026, 10N0027, COLOR (10 recargas)	
03HPC0006	HP C6657A, C8728A, COLOR (8 recargas)	